


How to Deactivate Wi-Fi

You will need:

- Phillips screwdriver or battery drill
- Step Ladder


Important - Please disconnect the sauna from the power supply before you start

1. Place the stepladder on the left side of the sauna to get access to the roof.
2. Use a screwdriver or battery drill to loosen the screws on the roof so that you can access the power supply unit (metal box marked with a star).

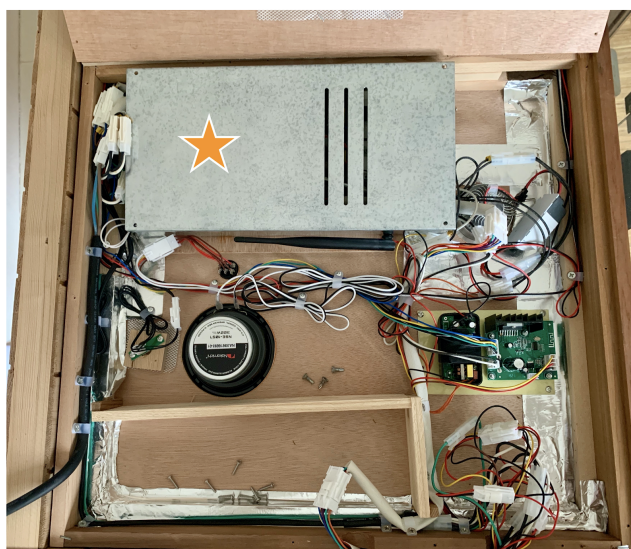

3. Loosen the screws on the corners of the power supply unit to access the electrical components of the power supply unit.

4. The Wi-Fi can be found in a small circuit board. The easiest way to find it is to follow the antenna cable (green star) to the board (purple star). Simply disconnect the circuit board from the power. This will deactivate it immediately.

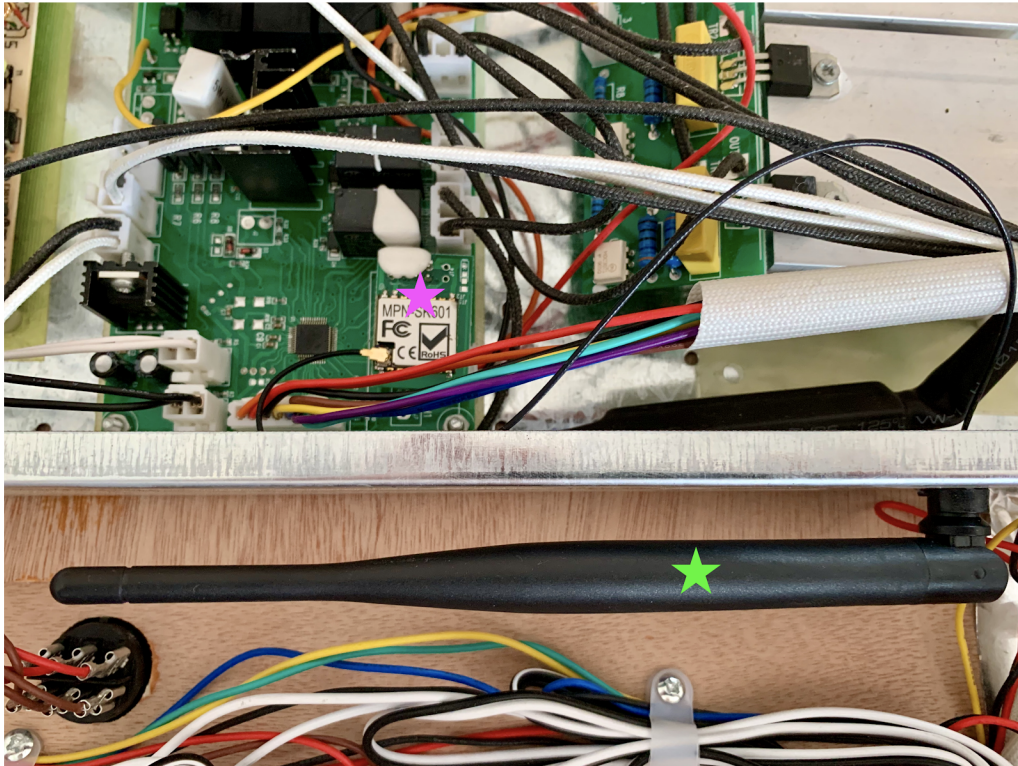

5. On the circuit board there is a small golden metal magnetic plug. If you remove this plug, you disconnect the Wi-Fi antenna so that it can be removed as well.
6. If you want to reactivate the WIFI, place the antenna in its original location and reconnect the board to the power supply. Reconnect the infrared cabin to the power and press and hold the power key on the keypad for six seconds to reset the Wi-Fi.
7. Enjoy your next sauna session.