


How to Exchange a Temperature Sensor

You will need:


- Phillips screwdriver or battery drill
- Step Ladder

Important - Please unplug the sauna before starting the replacement

1. Using the step ladder go to the roof of the Sauna to locate the Temp Sensor. The Temp Sensor can be found on the power cord side of the Sauna under a wooden flap (the one marked with a star). This may slightly vary depending on the sauna model.

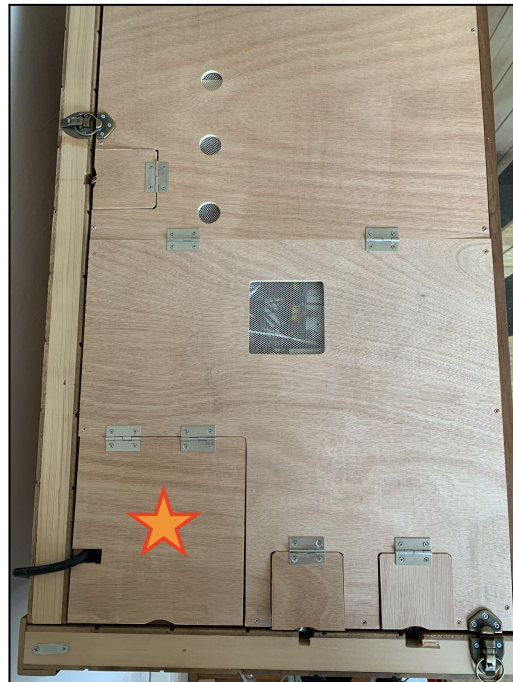

2. You can find the Temp Sensor on top of small wood block with mesh usually next to a speaker.

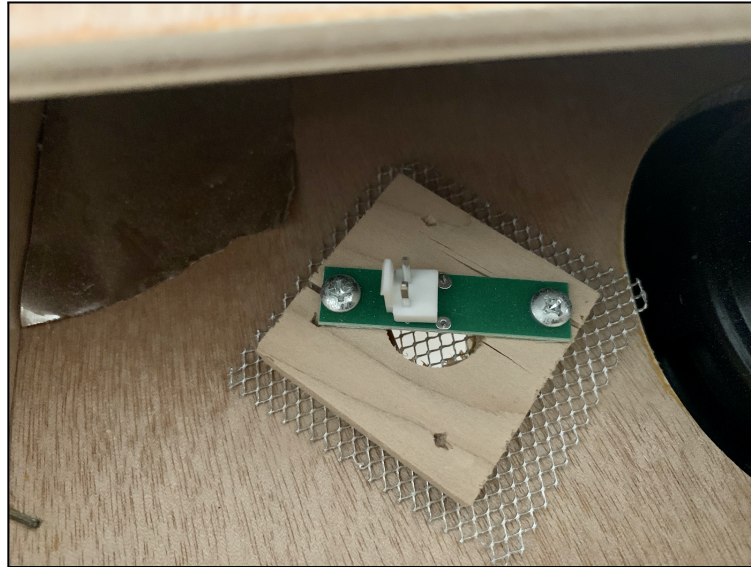

3. Please disconnect the two prong molex wire connection of the Sensor and disconnect it from the silver power supply box as well.
4. Unscrew the actual sensor from the sauna. Take the new Temp Sensor and screw it to the same spot as the old Temp Sensor. Connect the molex connectors back to the power supply and new Temp Sensor.
5. Replace the flap and you will now be able to reuse the sauna.