

How to Change a Premier Sauna Wall Light Fixture

How to Change a Premier Sauna Wall Light Fixture


You will need:

- Philip's Head Screwdriver

Important: Please disconnect the sauna from the power supply before starting

Light fixtures might look different depending on the age of the sauna, but the steps to replace a fixture are the same. There may also be a colour variation between bamboo light shades.

1. Gently remove the magnetized Bamboo shade from the fixture (a). Notice the two screws at each end of the fixture, unscrew and gently remove the glass from the fixture (b).

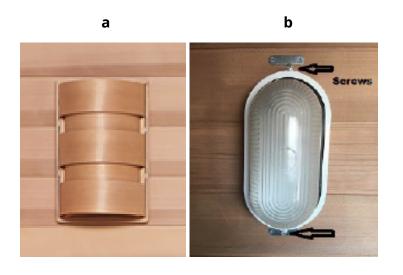

support@infraredsauna.eu



Clearlight®

How to Change a Premier Sauna Wall Light Fixture

2. The light bulb and the wall mounting should be exposed - remove the light bulb. The fixture will be mounted to the wall by two more screws. Unscrew those from the wall.



- **3.** Once pulled from the wall, unhook the fixture wire Molex connectors from the fixture and the wall.
- **4.** Check the new fixture to make sure the Molex connectors match the wall connectors. Reverse the steps above making sure to firmly connect the Molex connectors from the fixture to the wall.
- **5.** Reconnect the power supply and enjoy your next sauna session.

support@infraredsauna.eu

