

How to Exchange an Inside or Outside Light

You will need:

- Slotted screwdriver (optional)

Important - Please disconnect the sauna from the power supply

1. Remove the faulty light. To do this, lift the holder from the ceiling either with your fingertips or with a slotted screwdriver. When removing the spotlight, pay attention to the spring-loaded catches, as they can snap shut like a mousetrap. The photo below is of an inside light but the same principle applies to an outside light.



2. Pull the light down until the plug connection is visible. Disconnect the spotlight from the plug.



3. Connect the replacement light.
4. Please press the spring locks carefully against each other so that the lamp holder fits back into the hole. Once the spring catches are completely in the hole, the bracket should snap into place.
5. Reconnect the sauna and enjoy your next sauna session.