


How to Exchange a Bluetooth Board

You will need:


- Phillips screwdriver or battery drill
- Step Ladder
- 5.5mm Wrench

Important - Please unplug the sauna before starting the exchange

1. Using a step ladder go to the roof of the sauna to locate the Bluetooth Board. The Bluetooth Board can be found on the power cord side of the Sauna. It is generally located in the area marked with a purple star. You may need to unscrew the plywood panel in this area to gain access. The location of the Bluetooth may vary depending on the sauna model.

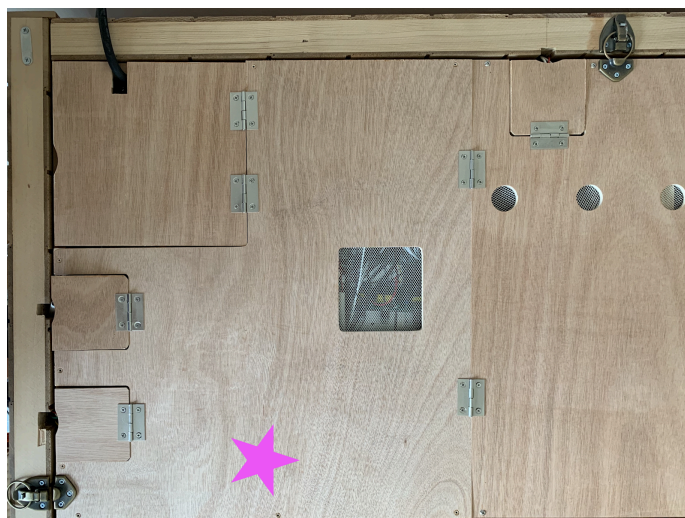

2. The Bluetooth Board is the one on the right-hand side of the photo below.

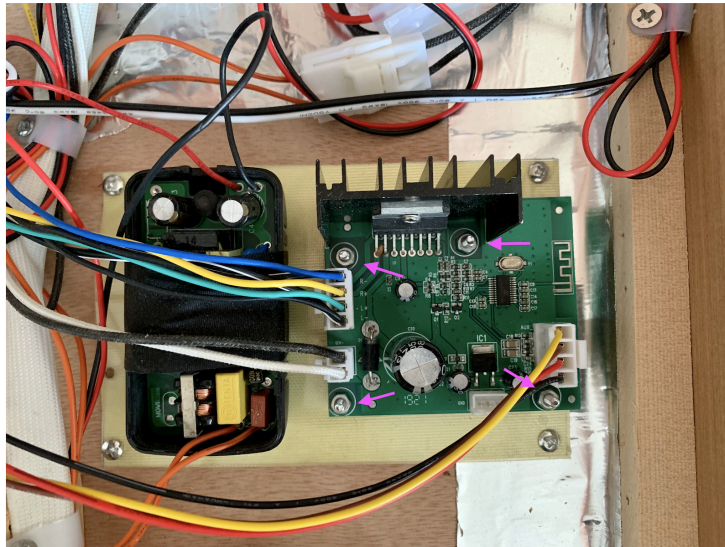

3. Disconnect the three Molex wire connections and unscrew the 4 nuts (marked by purple arrows in the photo above). There may be more Molex connectors depending on the model and age of the sauna.
4. Place the new Bluetooth Board in the same place, connect the Molex connectors, replace the nuts and tighten them.
5. Replace the hatch or plywood and screw it back down back if necessary
6. Reconnect your sauna to the mains supply.
7. To locate the Bluetooth on your device: Settings - Connections - Bluetooth (enable) - Infrared Sauna - Connect.
8. Enjoy your next session.