

Sanctuary Door Alignment Instructions

Here are a few tips and tricks to align your door if it does not close properly.

You will need:

- Allen key (4mm)
- 2 persons
- Spirit level
- 3-4 window packers (or thin plywood pieces)

1. First of all, you should check that your floor is level using a spirit level. If this is not the case, put window packers or plywood under the bottom of the sauna to ensure that it is level. This is really important and the basis for all further steps.




2. Make sure that the right hand-side glass panel is pushed firmly into the groove of the wooden panel and fixed at this position. This procedure is best done with 2 people - one pushes the glass panel into the groove and the other pushes the wood panel in the opposite direction. Then fix this position with the brackets and make sure to drill in the screw attached to the L-shaped bracket. Also make sure to close the eyelets on the roof.

3. If the door is still not aligned properly, have a close look at the hinges. They should be straight. Moreover, the gaps between the glass on the right side and the glass door should be the same from top to bottom.

The hinges have two parts. One that attaches to the side glass (right side of the hinges when standing in front of the sauna), and the left side that attaches to the glass door.

Prior to adjusting the hinge on the left side, please ensure the right side of the hinge (the one attaching to the side glass) sits straight and flush with the right glass door. See the image at the below and refer to the green arrows indicating the vertical alignment of the hinges to the right glass door.

Once this is guaranteed, it is important to now check on the left side of the hinge, indicated by the red arrow. You have to check every hinge in order to ensure the left side of the hinge sits straight/flush with the glass.

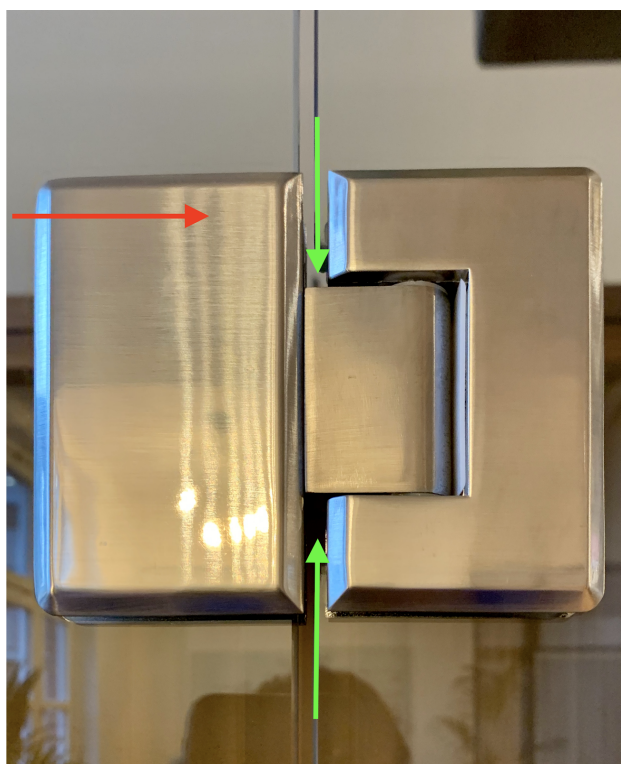

4. If you notice that this is the problem why the door does not shut, the left hinge on the door will need adjustment.

To do so, you will need a second person to help you adjust the hinges, please do as follows:

- One person goes on the inside of the sauna, the other stays outside
- Use the window packers or pieces of ply and place them underneath the door (Note: You may have to lift the door if it does not shut at the moment)
- The person on the inside should now use the Allen key and loosen the screws of every hinge on the inside. Now the door becomes loose and can be lifted slightly to push the packers or pieces of ply further under the door to lift.
- The person on the outside should now check that the gap between the door and the right-side panel is straight from top to bottom. If that is the case and the door has been lifted, the person on the inside should tighten the hinge screws again. Tighten all three hinges (2 in some models) one by one. The one at the top carries the most weight and is therefore of most importance. This is indicated in the photos below (Note: Only loosen the hinges on the side of the door).



5. Also, the part of the hinge which is connected to the glass door should be straight. If this is not the case one of you should go into the sauna and loosen the screws. The other one should lift the door from the outside

6. You may find that the upper edge of the door is slightly further forward than the lower edge. The door is only held and pulled at the bottom (for aesthetic reasons) with a magnet. To correct this by a few millimetres you will need to loosen the screw marked 1 (photo below) and then push the left-hand side glass panel as far as possible from the inside away from the sauna. Then tighten the screw completely. Then turn to screw 2, loosen it and push the right glass panel as far as possible outwards and tighten the screw again in this position.



7. Your sauna door should now be aligned correctly.
8. Enjoy your next sauna session.